


# DISPLAY ONE® Messenger•RTR

## AD-VANTAGE 3480 & 4686 INSTRUCTIONS

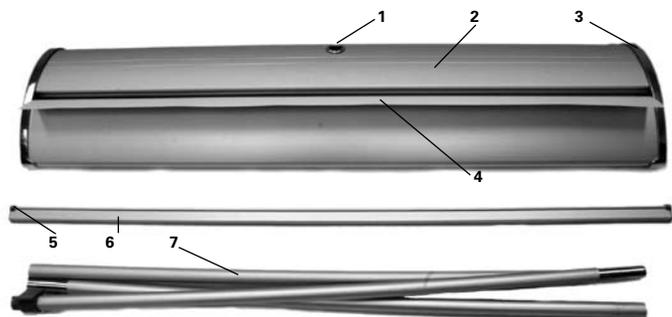

### Legend

- |                   |                      |
|-------------------|----------------------|
| 1. Pole Holder    | 5. Header End Cap    |
| 2. Base Unit      | 6. Header            |
| 3. End Cap        | 7. Shock-Corded Pole |
| 4. Graphic Holder |                      |

### Setting Up The Base

1. Take the base out of the bag, making sure all parts are present.
2. Unfold the base completely. Position the unit on the ground, with the pole holder on the far end of the unit.
3. Remove and assemble the shock-corded pole. Firmly insert pole into the pole holder on the unit.
4. Holding the header firmly, slowly pull the graphic up to the top of the shock-corded pole. Insert the top cap of pole into the header.




### Installing Graphics Part 1 - Header

1. Remove both end caps from sides of header.
2. Open the snap lock and place in front of graphic.
3. Line the graphic up into the header.
4. Press/close the header to lock the graphic firmly.
5. Replace header end caps.





### Installing Graphics Part 2 - Bottom Base

1. Position the base in front of you, with the pole holder on the back half of the base. Flip base over.
2. Remove thumb screw on right side of base.

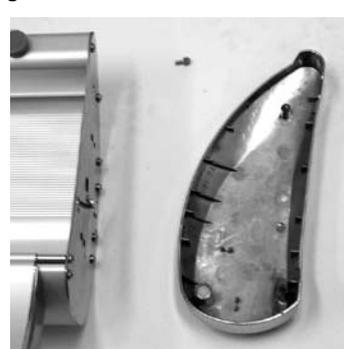

3. Hold the base with your left hand and end cap with your right, pull the end cap off the base, exposing the tension pin. **DO NOT PULL THE TENSION PIN. Pulling the pin early will cause the graphic holder to retract.**
4. Lay the banner out flat, right side up behind base.
5. On the graphic holder, there is a strip of adhesive. Remove the protective paper to expose adhesive.
6. Firmly and evenly press the bottom of the banner onto the adhesive strip on the graphic holder.

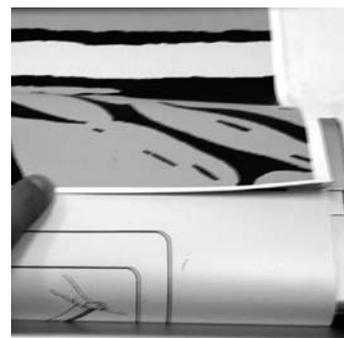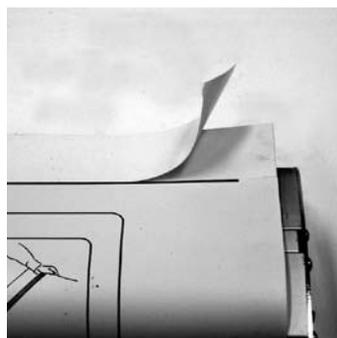

7. Install pole into base; raise banner and insert the top cap of pole into the header.
8. Holding the graphic firmly, slowly remove tension pin.
9. Gently allow graphic slack to slowly retract into base.