
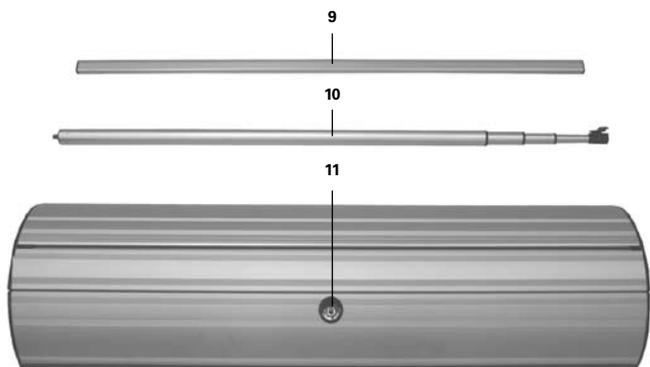
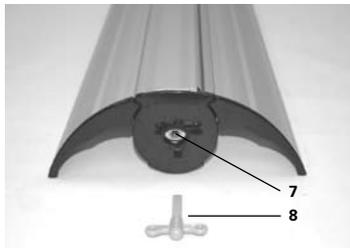


DISPLAY ONE® Messenger•RTR

PREMIUM 3386 INSTRUCTIONS

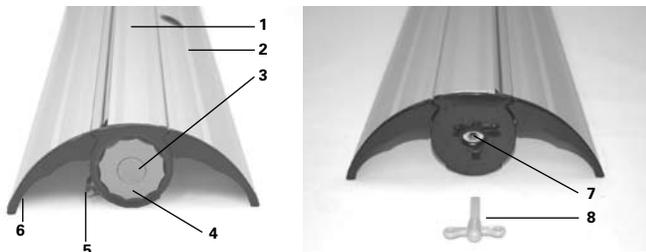


Legend

- | | |
|---------------------------|----------------------|
| 1. Clip Lid | 7. Roller Block Hole |
| 2. Foldable Base | 8. "T" Key |
| 3. Tension Release Button | 9. Header |
| 4. Tension Wheel | 10. Telescoping Pole |
| 5. Roller Switch Button | 11. Pole Holder |
| 6. Adjustable Foot | |

Setting Up The Base

1. Take the base out of the bag.
2. Unfold the base completely. Position the unit on the ground, with the pole holder on the far end of the unit.

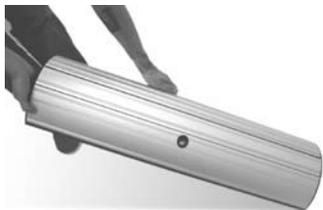

CAUTION: Do NOT put your fingers in the gap of the folding joints while unfolding. This will pinch your fingers.

Setting Up the Graphic

1. Screw the telescoping pole into the pole holder located in the center of the base until it's completely locked in the pole holder.
2. Open the clip lid of the base and take out the header. Close the clip lid.



3. Holding the header firmly, slowly pull the graphic up to the top of the telescoping pole. Insert the top cap of pole into the header. Adjust the height of the pole to fit the height of the graphic.
4. Adjust the graphic tension if necessary (refer to "Adjusting Graphic Tension").



Adjusting Graphic Tension

1. Press roller switch button firmly in the direction of the tension wheel center until the roller wheel is exposed.




2. Turn the wheel counter clockwise to add tension to the graphic. **Over tightening can cause the mechanism to lose its grip and damage the unit.**



3. Push on both sides of roller wheel to seat wheel inside of base.

Installing Graphics Part 1 - Header

1. Take the header out of the bag.
2. Open the snap lock and place in front of graphic.

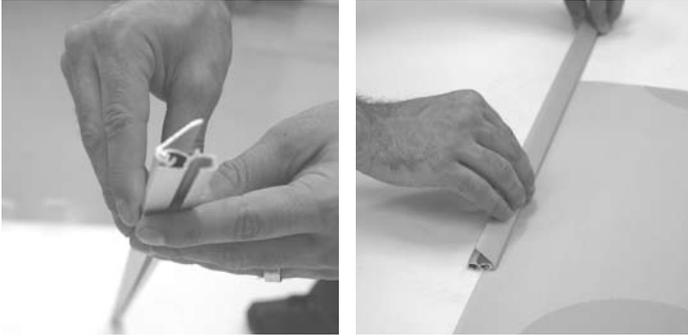

3. Line the graphic up into the header.
4. Press/close the header to lock the graphic firmly.

Inserting Graphics Part 2 - Bottom Base

1. Position the base in front of you, with the pole holder on the back half of the base.
2. Open the clip lid of the base. Move the interior roller until the snap section is facing upwards.
3. Open the snap section firmly with both fingers.



4. An option is to stop roller movement when you are attaching the graphic. In order to do this, insert the "T" key into the roller block hole, moving the interior roller until the key fits snugly. This will stop the roller from moving while the graphic is being installed.




5. Insert graphic into the entry groove of the snap section. With graphic completely inserted, firmly press the snap section, locking the graphic.
6. Refer to "Adjusting Graphic Tension" to add tension to the roller wheel to wind graphic into the retractor base. **Over tightening can cause the mechanism to lose its grip and damage the unit.**




Uninstalling Graphics

1. Make sure that graphic is fully set up on the pole.
2. Press the tension release button firmly until you hear the roller spring fully release.
3. Open the clip lid of the base.

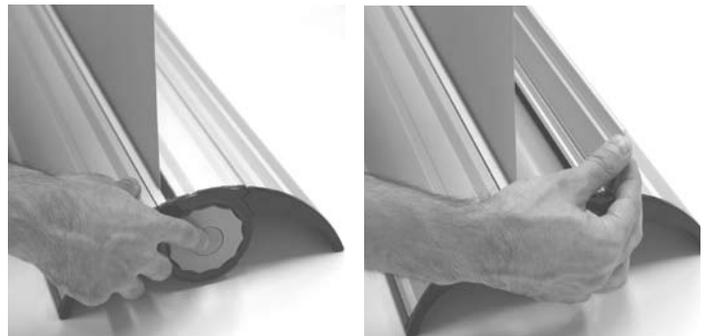

4. Insert the "T" key in the roller block hole to lock the bottom roller. Move the roller slightly with your hand to adjust the hole if the "T" key is not going in fully.
5. Firmly open the snap section with both hands to remove the graphic.

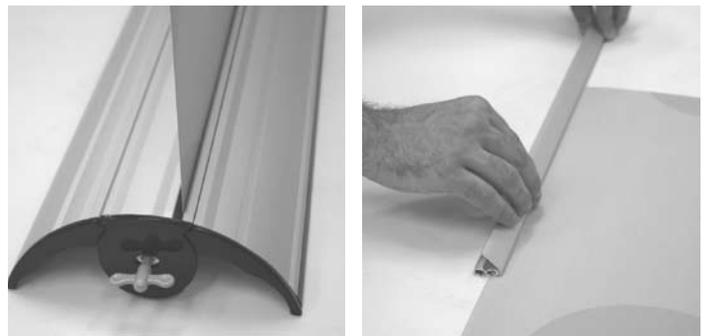

6. Close the clip lid of the base.
7. Lower the pole and remove the header from the pole.
8. Open the snap lock of the header to remove graphic.